



Managing Subscriber-Side access control

Purpose: Illustrate what steps are taken to configure Subscriber-side access control for management purposes. With the x.4.2 release it is now possible to manage the Nomadix Gateway when connected as a Subscriber.

Directions:

1. Navigate to Configuration -> Access Control
2. By default all but SSH Shell access is blocked, uncheck to allow access via other interfaces

NOTE: The Network IP or the 172.30.30.172 address can be used for management. Source IP-Based Access Control, if enabled, overwrites the Interface selections.

